

PAVER KIT INFO - WWS-WRS SLIDES

When installing an Inter-Fab White Water™ or Wild Ride™ slide using a paver kit, you must ensure that all standard installation requirements are met. The slide must be compatible with the type of pool on the intended installation and all ANSI/NSPI-2003 requirements must be met. Refer to installation manual. NOTE: This information replaces the information provided on page 10 of the White Water™/Wild Ride™ installation manual.

Figure 1 illustrates an example of the minimum concrete pads recommended for the White Water™ and Wild Ride™ slides. Specific slide position and concrete pad orientations may vary. Make sure to allow for water stub up location near the ladder section of the White Water™ or Wild Ride™ slide when pouring the concrete pad for the ladder section. *In order to ensure proper placement, you will need to set the slide up first to determine where the concrete pillars will be located.*

Figure 2 shows a side view illustration of the White Water™ or Wild Ride™ slide foot deck anchor and wedge anchors used in a paver installation. Pavers can be a maximum of 3" thick. Pavers must be mechanically attached to the concrete pad using a setting material (such as mortar or thinset for example) that is no thicker than 3/8".

1" of each 3/8" x 7" wedge anchor (14 ea.) needs to be exposed above the final deck surface. The 3/8" wedge anchors must be drilled to a depth of 6" with 1" of the bolt left remaining above the final deck surface. The 3/8" x 7" wedge anchors (14 ea.) replace the 3/8" x 2-3/4" wedge anchors (2 ea.) from hardware kit #SH-108 and the 3/8" x 2-3/4" wedge anchors (12 ea.) from hardware kit #SH-106. You will need to factor in the thickness of your paver (3" MAX.) and the thickness of your setting material (3/8" MAX.) for your individual installation.

You will need a 3/8" masonry bit for the White Water™ or Wild Ride™ slide.

Inter-Fab Inc. will not be responsible for damage to pavers caused by drilling or mechanically attaching to concrete pad. Refer to paver manufacturer's specific installation instructions before beginning.

Minimum Concrete Pads - WWS & WRS (Plan View - NOT to Scale)

5 concrete pads are needed:
(1) 12" wide x 32" long x 12" deep
(4) 16" wide x 16" long x 12" deep

Center feet on pads

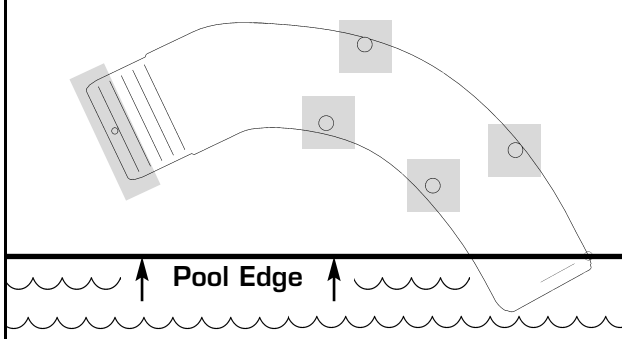


Fig. 1

Example of Deck Anchor on Concrete Pad (Side View)

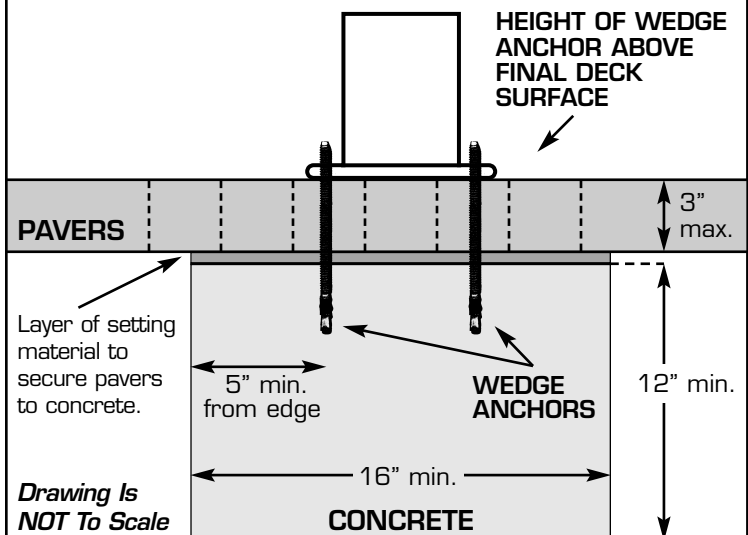


Fig. 2

3050 S. ALVERNON WAY • TUCSON, AZ 85713
520.790.7040 • 800.737.5386 • FAX 520.790.7127
i n t e r - f a b . c o m